
AR82.30-P-6100GH	Removing and installing wiper arm	7.3.97

MODEL 163.113 /128 /136 /154 /157 /172 /174 /175

1 Protective cap
2 Nut

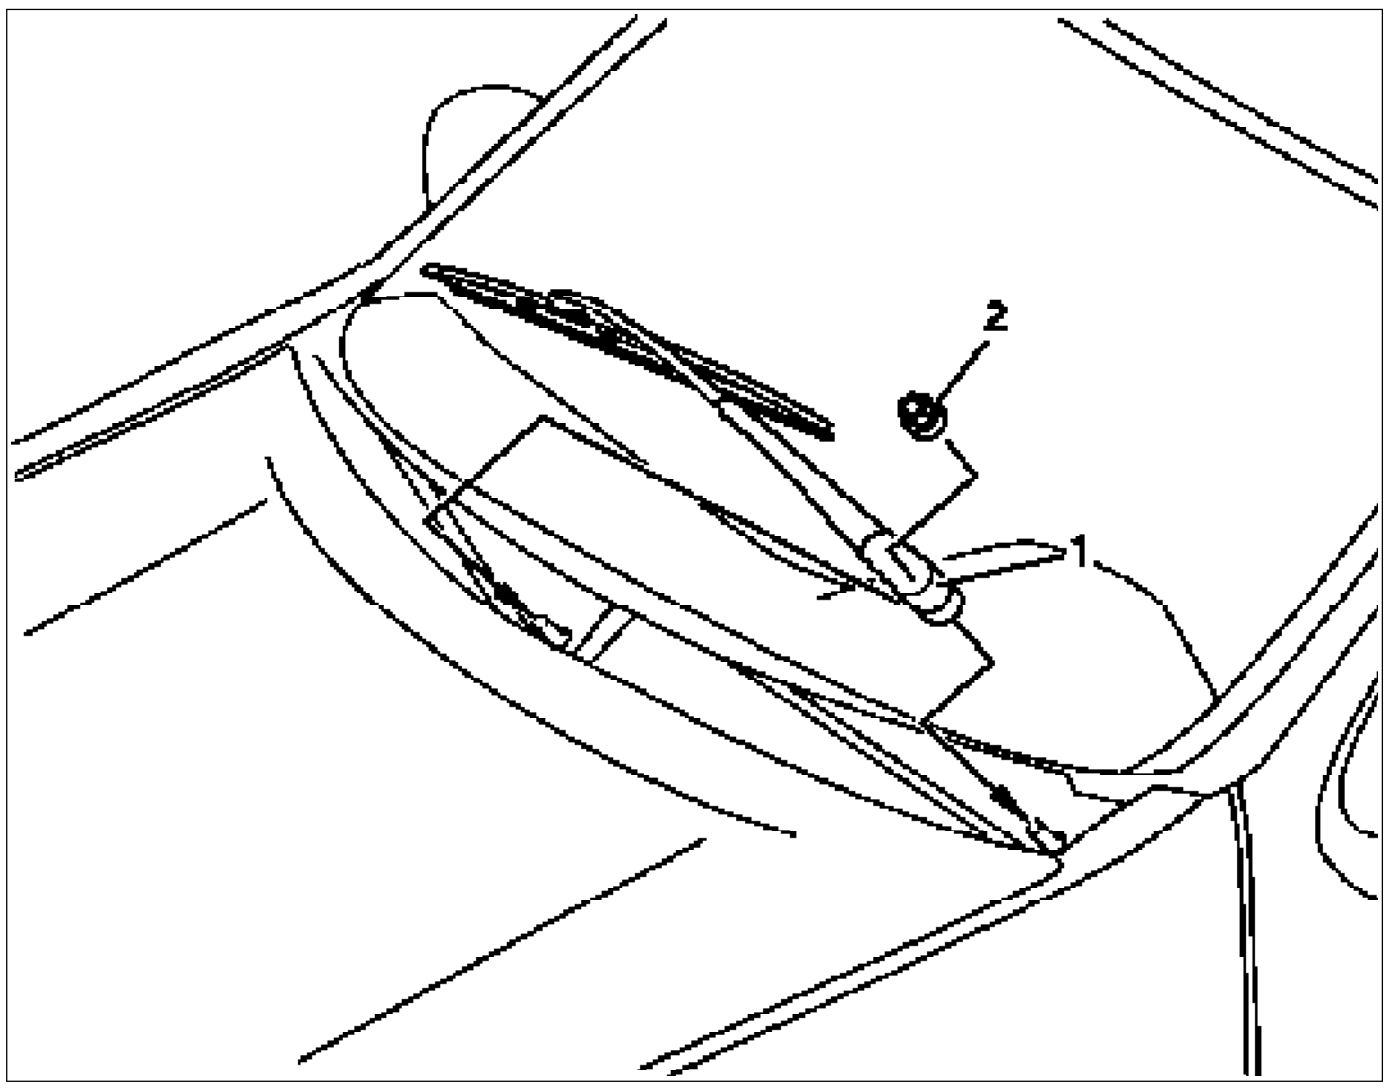

P82.30-0386-11

	Remove/install		
⚠ **Danger!**	**Injury hazard** by trapping or crushing, in extreme cases with loss of limbs when reaching into windshield wiper mechanism	Always remove ignition key when working on windshield wiper mechanism.	AS82.30-Z-0001-01A
1	Ensure that wiper motor is in park position		
2	Open protective cap (1)		
3	Unscrew nut (2)	Nm	*BA82.30-P-1002-01C
4	Take off wiper arm	Hold wiper arm on mounting section to avoid hitting against windshield.	
5	Install in the reverse order		

Nm **Windshield wipers**

Number	**Designation**		**Model Series 163**
BA82.30-P-1002-01C	Nut for wiper arm on windshield	Nm	18